




# INSTALLATION TEMPLATE FOR TUBULAR LEVERSET MODELS: UH40013, UH40014 & UH40015.

**TEMPLATE**

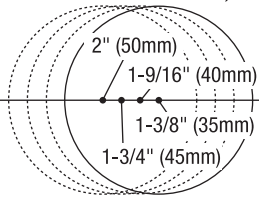

Make a 1" (25mm) hole in the center of door edge

**BACKSET 2-3/8" (60mm)**

**BACKSET 2-3/4" (70mm)**

Make 2-1/8" (54mm) hole

