


## INSTALLATION INSTRUCTIONS FOR DEADBOLT LOCK MODELS: UH40026 & UH40030


### 1 MARK DOOR & BORE HOLES

- A:** Fold template on edge of door and mark hole for 2-3/8" or 2-3/4" backset.
- B:** Drill 2-1/8" hole through door (from both sides to avoid damaging door).
- C:** Drill a 1" hole in edge of door.
- D:** Cut out a 2-1/4" x 1-1/8" x 1/8" for 2-3/4" backset or 2-1/4" x 1" x 1/8" for the optional 2-3/8" backset.

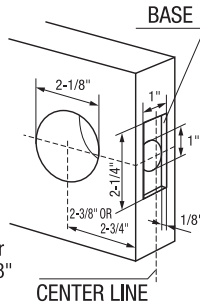


### 2 INSTALL LATCH

- A:** Install security shield.
- B:** Install deadbolt oriented with cam slot down.

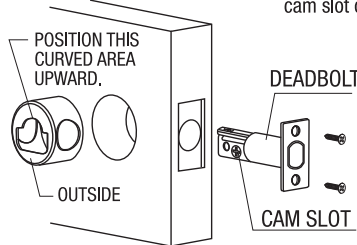

### 3 INSTALL OUTSIDE CYLINDER

#### SINGLE CYLINDER

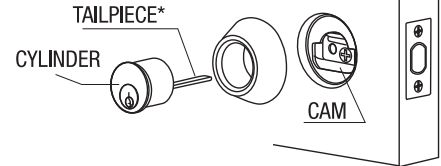

\*Keep cylinder tailpiece **HORIZONTAL** while inserting it into cam slot.


### 4 INSTALL INSIDE TRIM

#### SINGLE CYLINDER



When you are done installing the deadbolt, check the operation by locking it with the key. Make sure that you can remove the key with the deadbolt staying locked. Then unlock the deadbolt and remove the key. If you cannot remove the key, remove the cylinder and insure that the tailpiece is installed horizontally.


### 5 INSTALL STRIKE

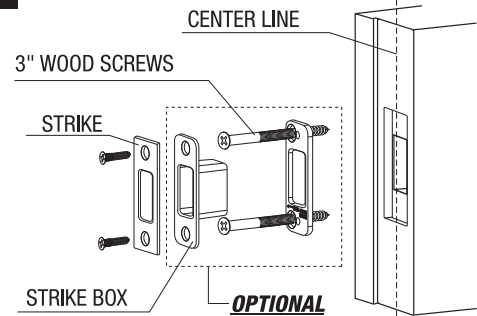

©2015 Hampton Products International Corp. • 50 Icon, Foothill Ranch, CA 92610-3000 USA • www.universalhardware.com • 1.877.701.7837 • 999-00380\_REV D 08/15

TEMPLATE

Fold and fit around door edge

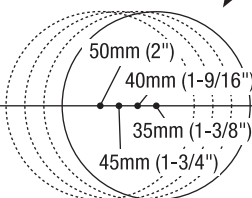

Make a 25mm (1") hole in the center of door edge

BACKSET 60mm(2-3/8")

BACKSET 70mm(2-3/4")

Make 54mm (2-1/8") hole

CUT ALONG DOTTED LINE TO REMOVE TEMPLATE

WARNING: IF THIS RULER DOES NOT MEASURE EXACTLY,  
DO NOT USE THIS TEMPLATE.