


**INSTALLATION TEMPLATE FOR CYLINDRICAL LEVERSET  
MODELS: UH40017, UH40018, UH40019, UH40021, UH40022,  
UH40023, UH40024, UH40025 & UH40030.**

**TEMPLATE**  
FOR INSTALLING LATCH

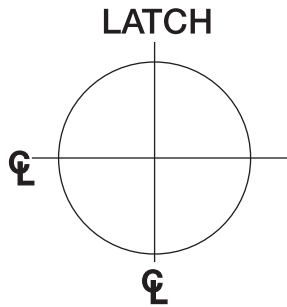

MARK CENTER OF DOOR  
THICKNESS FOR 1"  
DIAMETER HOLE

DETACH HERE

FLAT NO BEVEL

LATCH

- IMPORTANT**
1. FOR HIGHSIDE OF BEVEL PLACE OUTSIDE LINE AT EDGE OF DOOR
  2. FOR FLAT DOORS PLACE CENTER LINE AT EDGE OF DOOR
  3. FOR LOWSIDE OF BEVEL PLACE INSIDE LINE AT EDGE OF DOOR

MARK CENTER  
FOR 3/8" HOLES

NOTE:  
Do not drill these holes for  
non thru bolt installation.

MARK CENTER  
FOR 2-1/8" HOLE


2-3/4" BACKSET

2-3/8" BACKSET

Notch for metal  
door only

2-3/4"

5/32"

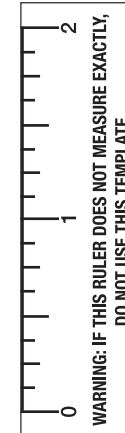

WARNING: IF THIS RULER DOES NOT MEASURE EXACTLY,  
DO NOT USE THIS TEMPLATE.