


**INSTALLATION TEMPLATE FOR CYLINDRICAL LEVERSET
MODELS: UH40017, UH40018, UH40019, UH40021, UH40022,
UH40023, UH40024, UH40025 & UH40030.**

TEMPLATE
FOR INSTALLING LATCH

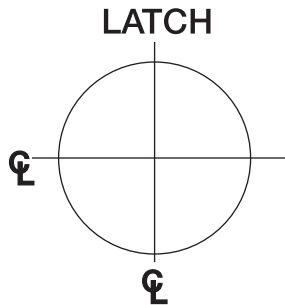

MARK CENTER OF DOOR
THICKNESS FOR 1"
DIAMETER HOLE

DETACH HERE

FLAT NO BEVEL

LATCH

IMPORTANT

1. FOR HIGHSIDE OF BEVEL PLACE OUTSIDE LINE AT EDGE OF DOOR
2. FOR FLAT DOORS PLACE CENTER LINE AT EDGE OF DOOR
3. FOR LOWSIDE OF BEVEL PLACE INSIDE LINE AT EDGE OF DOOR

MARK CENTER FOR 3/8" HOLES

NOTE:
Do not drill these holes for non thru bolt installation.

MARK CENTER FOR 2-1/8" HOLE


2-3/4" BACKSET

2-3/8" BACKSET

Notch for metal door only

2-3/4"

5/32"

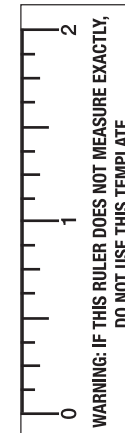

WARNING: IF THIS RULER DOES NOT MEASURE EXACTLY,
DO NOT USE THIS TEMPLATE.